



Calf-Tel 24|74 Double Pail Holder Assembly Instructions


Calf-Tel Double Pail Holder Bill of Material:

Item	Hampel Item Number	Description	Qty
1	CTPHD	Double Pail Holder	1
2	CH-3214	Pail Holder Support Stem	1
3	CT-9500	Pail Holder Hardware Kit	1

Tools Needed:

1. Flat Head Screw Driver
 2. 7/16" Deep Well socket
 3. Ratchet
- A. Assemble Pail Holder Support Stem to Double Pail Holder using:
 - a. 1 washer, 1 nut
 - B. Assemble Pail Holder Assembly to Calf-Tel Hutch using:
 - a. 2 washers, 2 nuts
 - b. Slide pail holder over lip of side feed opening and push studs through holes in the hutch
 - C. Fasten Pail Holder Stem to Calf-Tel Hutch using:
 - a. 1 screw, 1 washer, 1 nut

Inside View

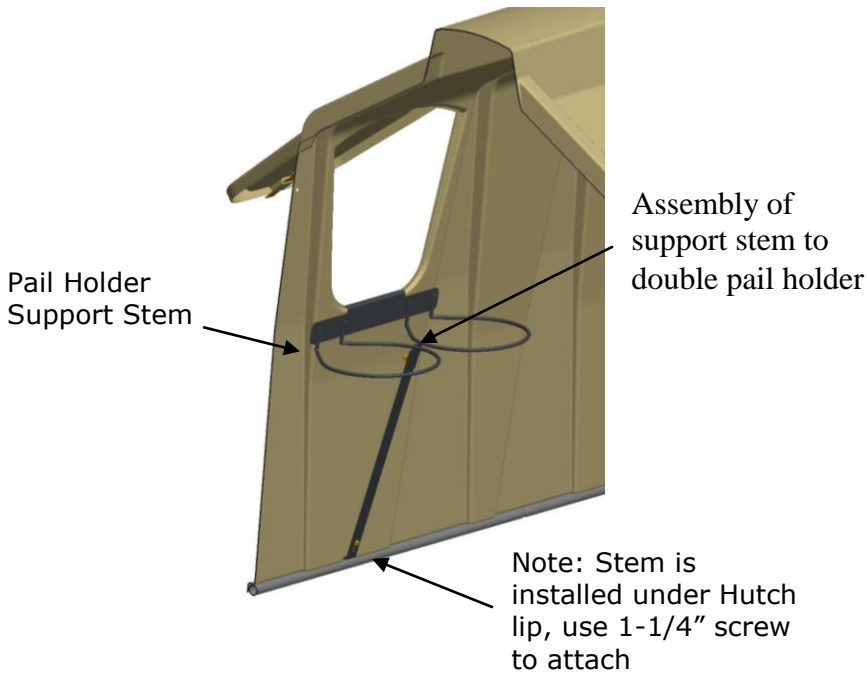

Outside View

